

# Table of Contents

<b>Installation of the DWC.....</b>	<b>1</b>
Power.....	1
Calibration.....	1

# Installation of the DWC

## Power

The DWC requires the following Voltages: +6V, -6V, 0 (beware, sometimes the color convection is not respected, if the DWC does not work check that the voltages on the lemo connector are as described in the manual ). The Discriminator box (the long metallic bar under the DWC) also requires -12V.

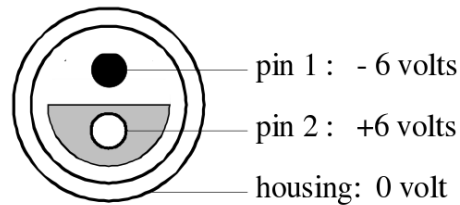


Figure 5. Cabling convention for the cable to be used for the bipolar 6 volts supply.

## Calibration

See DwcCalibration

-- MicheleCascella - 2014-11-28

---

This topic: DREAM > DwcInstallation

Topic revision: r4 - 2017-07-20 - MicheleCascella



Copyright &© 2008-2022 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.  
or Ideas, requests, problems regarding TWiki? use Discourse or Send feedback