

Table of Contents

How to change FPGA firmware.....	1
----------------------------------	---

How to change FPGA firmware

There are two FPGA boxes, both working (TB 2015, one with only the screen not working) connect the power cord and the USB cable to the pcdreamus

- If power cut, need to reload again the file in FPGA board, without modify it:

Login in pcdreamus,

```
loadFPGA
```

- if need to modify the software:

```
ise
```

and once opened it:

- - ◆ runAll
 - ◆ loadfile

-- SilviaFranchino - 2015-10-28

This topic: DREAM > FpgaFirmware

Topic revision: r1 - 2015-10-28 - SilviaFranchino



Copyright &© 2008-2022 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.

or Ideas, requests, problems regarding TWiki? use Discourse or Send feedback