

\* How to (18 July 2008) change HV setting (-> STANDBY1 or COSMICS)\*

Example to set HV to STANDBY1

### *HCAL*

- Select HC1\_UI\_DEN from G:\online\ecs\ShortCuts\CALO\HCAL
- Choose FSM
- right click on HCAL to select View
- HCAL\_HV window
- HCAL\_HV\_C window
- Choose GO\_STANDBY1 (accept PHYSICS on on the popup window)
- HCAL\_HV\_A window
- Choose GO\_STANDBY1 (accept PHYSICS on on the popup window)

### *ECAL*

- Using Accessories -> Communications -> Remote Desktop Connection log on echvc01w under the account akonopl (select log on "LHCB")
- The needed panel is directly opened
- Choose GO\_STANDBY1 (accept PHYSICS on on the popup window)
- Using Accessories -> Communications -> Remote Desktop Connection log on echva01w under the account akonopl (select log on "LHCB")
- The needed panel is directly opened
- Choose GO\_STANDBY1 (accept PHYSICS on on the popup window)

### **Notes :**

- If one wants to put HV ON for cosmics : follow the same procedure but instead of GO\_STANDBY1 select GO\_READY and write COSMICS on the popup windows
- It takes some minutes to go from a state to another one.

-- MarieHeleneSchune - 18 Jul 2008

---

This topic: LHCb > HVControlForEcalHcal

Topic revision: r2 - 2008-07-18 - MarieHeleneSchune



Copyright &© 2008-2021 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.

or Ideas, requests, problems regarding TWiki? use Discourse or Send feedback