

* How to (18 July 2008) change HV setting (-> STANDBY1 or COSMICS)*

Example to set HV to STANDBY1

HCAL

- Select HC1_UI_DEN from G:\online\ecs\ShortCuts\CALO\HCAL
- Choose FSM
- right click on HCAL to select View
- HCAL_HV window
- HCAL_HV_C window
- Choose GO_STANDBY1 (accept PHYSICS on on the popup window)
- HCAL_HV_A window
- Choose GO_STANDBY1 (accept PHYSICS on on the popup window)

ECAL

- Using Accessories -> Communications -> Remote Desktop Connection log on echvc01w under the account akonopl (select log on "LHCB")
- The needed panel is directly opened
- Choose GO_STANDBY1 (accept PHYSICS on on the popup window)
- Using Accessories -> Communications -> Remote Desktop Connection log on echva01w under the account akonopl (select log on "LHCB")
- The needed panel is directly opened
- Choose GO_STANDBY1 (accept PHYSICS on on the popup window)

Notes :

- If one wants to put HV ON for cosmics : follow the same procedure but instead of GO_STANDBY1 select GO_READY and write COSMICS on the popup windows
- It takes some minutes to go from a state to another one.

-- MarieHeleneSchune - 18 Jul 2008

This topic: LHCb > HVControlForEcalHcal

Topic revision: r2 - 2008-07-18 - MarieHeleneSchune



Copyright &© 2008-2019 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.

Ideas, requests, problems regarding TWiki? Send feedback