

## Status of ccvser

The status of the ccvser can be determined in two ways:

- Using the L0 Muon tools box
- Using did
  - ◆ loggon on tmudaq01
  - ◆ type did

## Start a ccvser

- loggon on the CCPC
- sudo service ccvser start

## Stop a ccvser

- Loggon on tmudaq01
- Start did by typing did
- Use the interface to kill the ccserv

-- RenaudLeGac - 18 Feb 2008

---

This topic: LHCb > L0MuonHowToCCSERV

Topic revision: r2 - 2008-02-18 - unknown



Copyright &© 2008-2021 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.  
or Ideas, requests, problems regarding TWiki? use Discourse or Send feedback