

After extracting the zip go to `./build/Demonstrators/SimulatorOverNetIo/`

Launch the simulator `./simulator_netio`

The simulator will say on which port it is publishing/reading and which e-link this information will be use to configure the OpcUa!ScaServer

Useful parameter

- -e change the e-link used
- -x change the listening port
- -y change the publishing port

-- Main.etfortin - 2018-11-29

This topic: Main > SimulatorGuide

Topic revision: r1 - 2018-11-29 - EtienneMarieFortin



Copyright &© 2008-2021 by the contributing authors. All material on this collaboration platform is the property of the contributing authors.
or Ideas, requests, problems regarding TWiki? use Discourse or Send feedback